


WINDOW SILL DETAILS

- NOTE:
1. Provide 1 layer of bed reinforcement directly under sill blocks.
 2. Sill Bond Beam can be deleted where opening is less than 1500 wide.
 3. Where windows are connected to sill blocks designer to consider connection of sill blocks to wall or sill bond beam below.

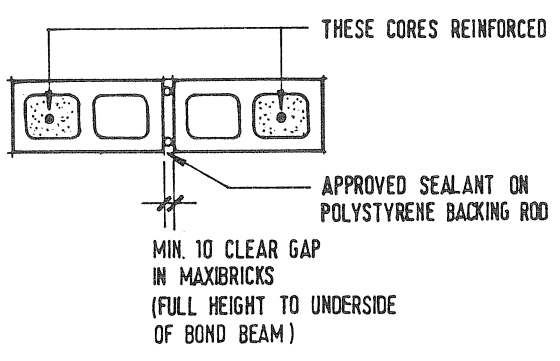

SUGGESTED SPACING OF EXPANSION JOINTS

1. Maximum 4m from external corners.
2. Maximum 3m along wall runs.

NOTE:
Expansion joint not required where full height openings occur within spacings required in 1) & 2) above.

EXPANSION JOINTS - suggested spacing & detail

<p>NORTHBRICK INDUSTRIES PTY. LTD ... LOT 2426 TIVENDALE ROAD. BERRIMAH. N.T... PH.(089) 84 4977.</p>	<p>MAXIBRICK BUILDING SYSTEM WINDOW SILL, EXPANSION JOINT DETAILS SHEET 6 OF 7</p>				
<p>CLARENDON CONSULTING ENGINEERS SUITE 3 FIRST FLOOR 96 WOODS ST DARWIN. N.T. PH.(089) 81 7500</p> <p>CERTIFIED: <i>[Signature]</i> DATE: 23/9/87</p>	<p>DESIGN DATA SHEET</p> <table border="1"> <tr> <td data-bbox="853 2027 1101 2150"> DARWIN CYCLONE AREA APP'D. J.R. Gardner MIE AUST </td> <td data-bbox="1109 2027 1292 2150"> DATE: 30/10/87 </td> <td data-bbox="1300 2027 1516 2150"> DWG. No. M/214/6 </td> </tr> </table>		DARWIN CYCLONE AREA APP'D. J.R. Gardner MIE AUST	DATE: 30/10/87	DWG. No. M/214/6
DARWIN CYCLONE AREA APP'D. J.R. Gardner MIE AUST	DATE: 30/10/87	DWG. No. M/214/6			